



Now pull on the handle until the ActionRack unit is fully extended.

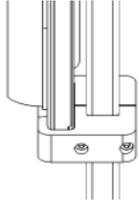


Now close the rack in the same manner till the slides come to rest in the latching block.

The slide should seat in this area

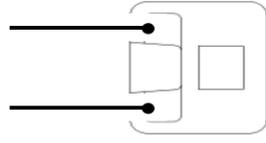


The latching block must stop the slides so the locks operate easily.

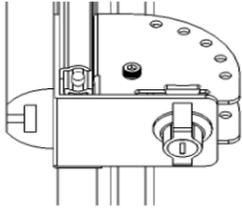


Turn the lock clockwise to the locked position it should turn freely and be in the center of the locking slot. If not, loosen latching block bolts and move the latching block, then snug bolts and repeat above steps until slides, latching blocks, and locks are in sync. Tighten latching blocks.

The next step is easier with two people. Set the unit on top of the vehicle in desired position. Certain equipment will extend past rear side. Make sure Rack is forward enough on the vehicle as not to interfere with rear hatch /window operation.


Tighten the load bar feet to manufactures specifications.

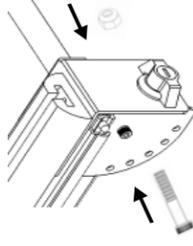

Place an adjustment bolt in each pivot adjustment hole, use the middle holes for now. Do not over tighten. Nut should be flush with threaded end of bolt. Operate rack several times to be sure everything is properly aligned.

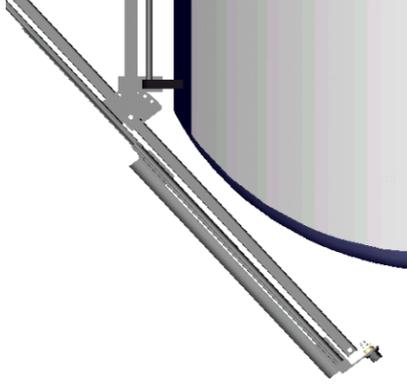

Now you may reposition the load position bolts on the pivoting unit to desired loading (down) position. **DO NOT** have the Action Rack too close to the side of your vehicle, as the weight of equipment could flex the load bars and cause the ActionRack to damage the side of your vehicle.

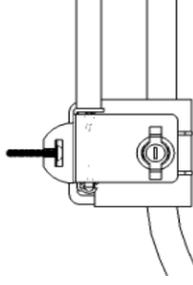

Now Attach your equipment carrier to the Action rack by inserting a carriage bolt with track washer into track and fastening equipment carrier. Some carriers may require some modifications

- ◆ Now that your ActionRack is installed on your vehicle operate it several times to become familiar with how it works.

- ◆ Carefully check the spacing between the ActionRack in the loading position and the side of your vehicle.

NOTES

You can reach us on the web at:
www.actionrack-getitup.com



ACTIONRACK

ACTIONRACK®



Product Installation

ActionRack's LOADING POSITION IS ADJUSTABLE TO SIMPLIFY LOADING AND UNLOADING OF YOUR ROOF TOP EQUIPMENT

 
- Thank you for purchasing an ActionRack. Take a moment and read to ensure safe and long lasting use of your ActionRack

Parts Included

Check Package Contents:



Action Rack Assembly



Latching Block QTY 2



1/4-20 x 2.00" Long Allen Head Bolt (Pivot/Adjustment Bolt) QTY



With 1/4 x 20 Locking Nut QTY 4



1/4" DIA Drill Bit



3/16" Allen Wrench



1/4-20 x 1 7/8" Long (Track Bolt) QTY 4



Track Washer QTY 4



Drilling JIG

1

Tools Required:



Drill



Clamp Optional But Recommended



7/16 Wrench or Adjustable

Please use **CAUTION** when working with Power tools.

CAUTION: Installation is a 2 person job.

ActionRack Mounting Instructions

LOAD BAR REQUIREMENTS


If you are purchasing load bars or if you already have load bars they must extend 2 1/2" beyond their mounting feet.

Find a good sturdy work surface to install the ActionRack onto the bars.


Loosen your load bar mounting feet and

2


Lift load bars off the vehicle. The mounting feet can remain on the load bars. Drill both load bar ends as follows.

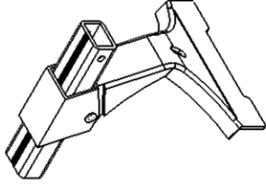

Load Bar

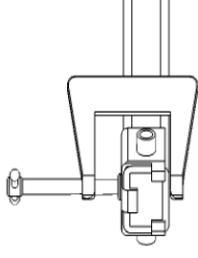


Slide Drill Jig onto the end of Loading Bar till it stops. Secure with Clamp (Optional but recommended).

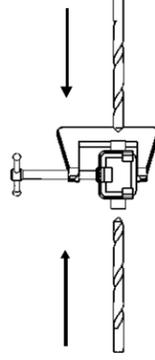


Drill through one wall of loading bar at a time. DO NOT attempt to drill straight through. When finished drilling remove clamp and jig.


3

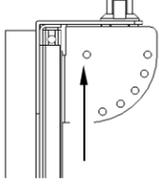

Identify the pivot hole on the pivot bracket located on the ActionRack Assembly.

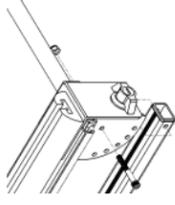

Set ActionRack Assembly on Load Bars. Line pivot holes on pivot, with the holes you drilled in loading bars.

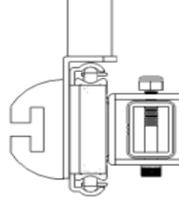


Slide pivot bolt through Pivot bracket holes and through load bar holes.

Note:


The pivot bolt should be turned with the Allen Wrench into the pivot hole as it is a tight fit. Tighten Locking Nut till nut is flush with the end of the bolt.

DO NOT OVER TIGHTEN.

4

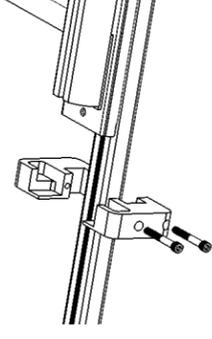

Place Latching Blocks around Load Bars pull tight until they seat on the slide. Inserts bolts and tighten till snug, using Allen Wrench supplied. Do not fully tighten, yet.

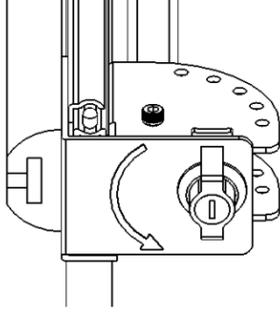

Unlock both locks.
Turn counter clockwise.

Hold Rear of Load Bars



Handle

Work the ActionRack by having one person hold the load bars firmly from the rear.

5